



# Nedo®



## EN Operating Instructions

### Lightweight Measuring Wheel

**703 1 1 1**

**703 1 1 2**

**703 1 1 3**

**703 1 1 6**

**NEDO  
GmbH & Co. KG**

Hochgerichtstraße 39-43  
D-72280 Dornstetten

Tel.: +49 7443 2401 0  
Fax: +49 7443 2401 45


[www.nedo.com](http://www.nedo.com)

[info@nedo.com](mailto:info@nedo.com)


062613

31.07.2018

GENERAL INFORMATION

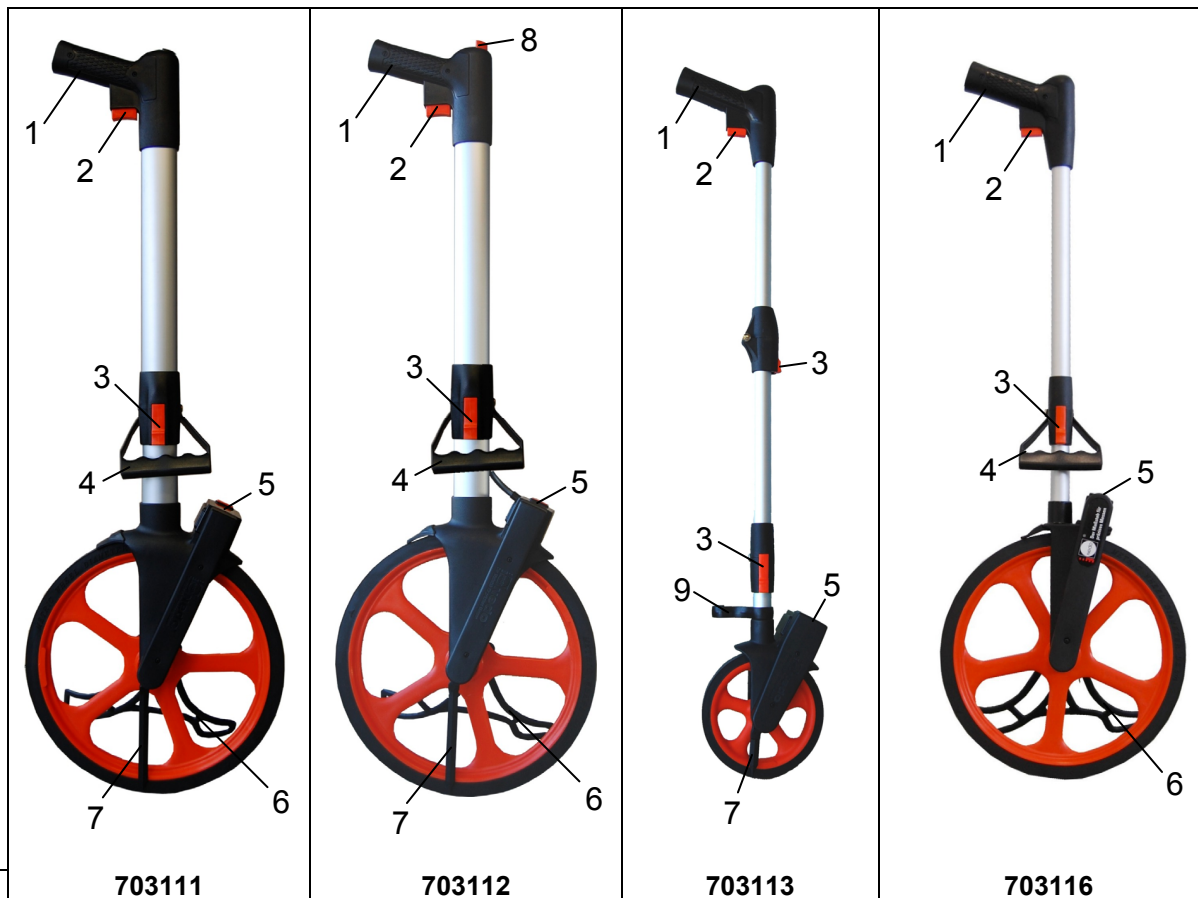

1	<b>Handle</b>
2	<b>Brake</b> Push button to stop the wheel
3	<b>Lever</b> Push to fold the handle
4	<b>Transport handle</b>
5	<b>Counter</b> Push the orange button to reset
6	<b>Stand</b>
7	<b>Pointer</b> Start and stop with the pointer on the marking of the wheel
8	<b>Reset button at handle</b> Push button to reset the counter
9	<b>Clip</b> If the handle is folded, fix with the clip for transport

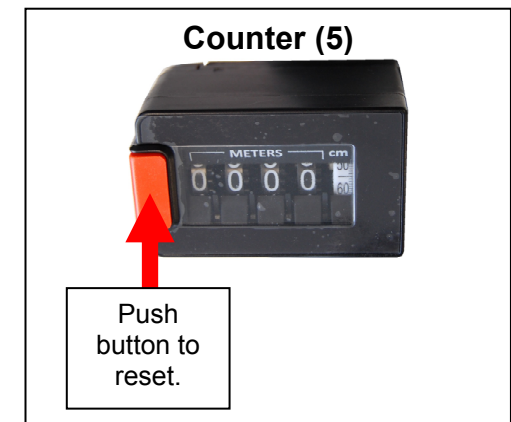

<b>Technical Data</b>				
<b>Part-No.:</b>	<b>703111</b>	<b>703112</b>	<b>703113</b>	<b>703116</b>
Diameter of wheel:	318,31 mm	318,31 mm	159,15 mm	318,31 mm
Circumference:	1.000 mm	1.000 mm	500 mm	1.000 mm
Measuring range:	0 – 9.999,99 m	0 – 9.999,99 m	0 – 9.999,99 m	0 – 9.999,99 m
Resolution:	0,01m / 1cm	0,01m / 1cm	0,01m / 1cm	0,01m / 1cm
Accuracy:	0,05%	0,05%	0,05%	0,05%
Weight:	2,3 kg	2,4 kg	1,2 kg	2,1 kg